



386010538		Unterputz-Armatur	concealed mixer
1	7328605-00	UP - ROSETTE	ESCUTCHEON, CONCEALED
2	7861905-00	DRUCKTASTE VIERECKIG POWER	PRESS BUTTON SQARE POWER
3	7351205-00	HÜLSE	SLEEVE
4	7351105-00	GRIFF PUSH	HANDLE PUSH
5	7329235-00	SCHRAUBEN SET	SCREW SET
6	7301100-00	DICHTUNGSSATZ	SEALING SET
7	93016000-00	HÜLSE	SLEEVE
8	7567800-00	KERAMIK - OBERTEIL	CERAMIC HEAD PART